






Assembly manual

<p>1. Put the base upside-down on the edge of the table.</p>	
<p>2. Insert the 4 T-slot nut into the column, align the holes to the T-slot.</p>	
<p>3. Place the column under the base, align the holes and insert the longer screw to the middle. 4. Insert the 4 shorter screws into the T-slot nuts. 5. Tighten the screws-</p>	
<p>6. Insert the rubber cap on the head of the screws.</p>	

7. Fix the monitor with the 2 shorter screw with the washers. (1 washer on the top, 2 washers on the bottom)



8. Use the three blue rubber clamps to manage the cables at the back of the profile

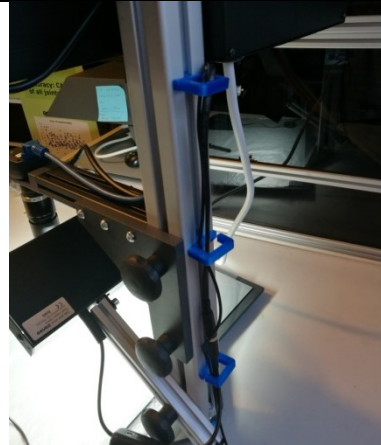

9. Insert the square cover-box on the top of the camera and fix it with the 2 screws on the front



10. Insert the rectangular cover-box above the cables.

